

RPA-X™

Rubber Process Analyzer

▶ The new X-Series™ instruments are Alpha Technologies' modular production floor solution for customers who are looking to bring testing closer to the production line.



▶ The RPA-X™ brings Alpha's superior testing solutions to the production floor with a mobile design that easily connects to any X-Dock™ station. The "X" in the RPA-X™ brand name stands for "cross-over" from lab environment to production floor. These test instruments are based on Alpha's flagship Premier™ technologies with the same outstanding reproducibility, repeatability, and test sensitivity.




ALPHATECHNOLOGIES

Features



- Adaptable for lab and production floor use
- Auto module docking identification
- Sealed design for production floor environments
- NIST traceable standards ensure excellent reproducibility worldwide
- Pressure transducer standard to provide pressure measurement in addition to torque
- Proprietary electronics produce stable measurements over a wide range of torque values
- Measure dynamic properties of rubber before cure, during cure and after cure
- Sealed biconical dies
- Advanced Fourier Transform Rheology tests, including but not limited to Long Chain Branching determination
- Operates using Enterprise software, a flexible LIMS system based on an open SQL database design
- Programmable auto data validation

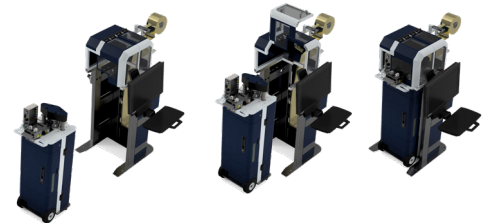

Performance



- Measure dynamic properties of rubber before cure, during cure and after cure
- Advanced precision strain control
- Improved sensitivity to mixing errors and/or compound changes
- Runs tests under controlled strain
- Runs tests under controlled stress
- SMART ALIGNMENT™ - A system that ensures excellent die cavity sealing for better repeatability
- Incorporates Alpha's leading reproducibility, test sensitivity, and repeatability standards
- Enhanced data sampling and processing using up to 64x faster data rate per cycle
- Up to 80 unique sub tests within a single test configuration
- Pre-strain setting for frequency and strain sweeps
- DYNAMIC SYMMETRY™ - A system that ensures parallel die closing, reducing variation

Options



- High temperature dies available up to 350°C
- Multiple film types available

Specifications



FREQUENCY:	0.1 to 3000cpm (0.0016 to 50 Hz)	TESTING STANDARDS:	Meets ASTM D5289, D6048, D6204, D6601, D7050, D7605, and D8059
TEMPERATURE RANGE:	Ambient to 230°C	ELECTRICAL:	100/110/115/120 VAC - 50/60 Hz single phase
MAX RAMP RATE:	1°C		200/220/240/260 VAC - 50/60 Hz single phase
MAX COOL RATE:	0.5°C		1 x 220 VAC; 2 x 120 VAC & 2 x 18 VAC
STRAIN:	±0.07% to ±1255% (±0.005 to ±90 degrees)		Max Power consumption 2200 VA; 9.5A@230V; 18.3A@120V
MEASURED DATA:	Torque, temperature, frequency, and strain	AIR PRESSURE:	60 psi (413Kpa, 4.2kg/cm ²) minimum
COLLECTED DATA:	G', G*, J', J'', S', S*, tanδ, η', η'', and η		120 psi (827Kpa, 8.4kg/cm ²) maximum
		DIMENSIONS:	19.7"W x 23.6"D x 57.4"H (50cmW x 56.9cmD x 145.cmH)

